


ROLLER BLIND WITH CASSETTE FITTING INSTRUCTIONS

HARDWARE

Please note : Screws are not supplied for bracket fixings and are dependent on the surface to which you are fixing please see chart below for recommended guide :

| FIXTURE GUIDE | RECOMENDED (Philips head) |
|---------------|---------------------------------------|
| Wood | 20mm 8 gauge |
| Steel | 6mm 6 gauge |
| Ceiling | Toggle Bolt |
| Plasterboard | Wall mates |
| Aluminium | 6mm 8 gauge or tech screw |
| Brick | Green plug & 38mm 8 gauge self tapper |

- Depending on if your blind is face fit or recess fit place the brackets in position, with a pencil mark the surface of the wall or window recess to indicate where to drill screw holes. Brackets should be no more than 100mm either end, and spread intermediately across the width approx 900mm apart. Brackets will be supplied for either recess or face fix as specified when ordering. If face fit be sure to check length to locate brackets are set at the correct height.

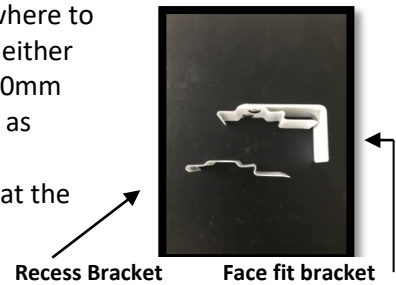

- When you are happy that you have correct positions for the brackets pre drill the screw holes and fix brackets securely.

- Locate the head box in the front lug of bracket then push the back of head box up and it will lock into position as shown



Taking the blind install the chain drive end into the bracket with protrusion (A) making sure that the enclosed top of the chain drive is facing upwards. Now placing the other end of the blind into the other bracket by retracting the pin, to retract the pin turn the serrated clear plastic cog, once end of blind is in place turn the cog the opposite way to extend the pin until it clicks into position.



- If you have a chain control secure the safety cleat supplied, firmly to the wall at the appropriate position to keep tension on the control chain and avoid a choking hazard. It is important to keep chains and cords safely away from children your new blind will have a safety warning tag attached please read carefully and do not remove.



Safety Cleat

- To operate your new blind use chain control to open, close and rotate using a steady tension and movement and avoid jerking or tugging of the chain. It is important that the chain does not rub against the fabric during operation of blind as this will cause the fabric edge to fray.
- Your blind is now installed and ready. We hope it brings you and your home many years of great functionality and beauty. We thank you for your purchase.

IMPORTANT INFORMATION

WARNING

ALL WINDOW COVERINGS WITH CORD OR CHAIN



Installation instructions

To avoid strangulation hazard, all internal window coverings with cord/ chain controls must have a child safety device installed where the cord has the possibility of forming a loop of 220mm or longer and it is at a height of less than 1600mm above floor level

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that the loose cord cannot form a loop of 220mm or longer at a height of less than 1600mm from floor level.

When using a cleat (Style 1) to secure the cord it must be at least 1600mm from floor level because a child is capable of unwinding a cord from a cleat. Please wind cord in a figure 8 dimension as indicated on Style 1 diagram.

A cord guide (Style2) may be installed lower than 1600mm above floor level if the cord is sufficiently secured or tensioned to prevent a loop 220mm or longer from being formed. If the cord is installed lower than 1600mm from floor level it must be designed to prevent a child from being able to remove the cord.

Making Blinds and Curtains Safer for Children

Blinds and curtain cords can be made safer in the following way:

Attach a Safety Device (enclosed)


Attach a cleat (Style 1) to the wall or window frame 1600mm or higher from the floor away from children or pets and wrap around the cleat.

- 1) Affix cleat with screws as shown
- 2) Wind loose cord around safety cleat


Attach a cord guide (Style 2)

- 1) Affix cord guide with screws as shown
- 2) Secure cord in cord guide at all times

Style 1 - Cleat

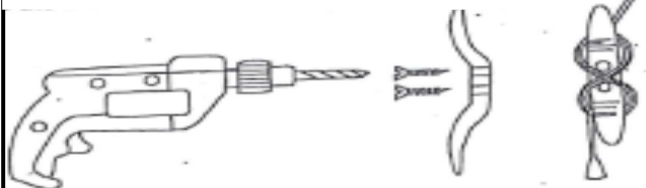

Style 2 - Cord guide

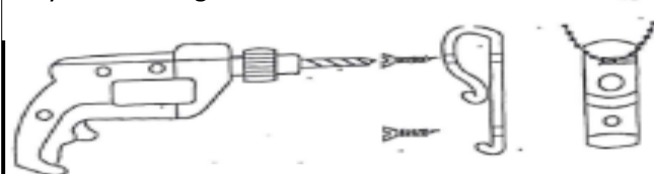

'WARNING: CURTAIN AND BLIND CORDS HAVE CAUSED THE DEATH OF YOUNG CHILDREN AND MUST BE INSTALLED SO THAT THEY ARE NOT A STRANGULATION HAZARD. FOLLOW THE INSTALLATION INSTRUCTIONS'