

# PANEL BLIND FITTING INSTRUCTIONS

Your new Panel Blind has been custom built for you from the highest quality materials please follow the installation instructions provided.

## HARDWARE

Please note : Screws are not supplied for bracket fixings and are dependent on the surface to which you are fixing please see chart below for recommended guide :

FIXTURE GUIDE	RECOMENDED (Philips head)
Wood	20mm 8 gauge
Steel	6mm 6 gauge
Ceiling	Toggle Bolt
Plasterboard	Wall mates
Aluminium	6mm 8 gauge or tech screw
Brick	Green plug & 38mm 8 gauge self tapper

Depending on if your blind is face fit or recess fit, place the brackets in position, with a pencil mark the surface of the wall or window recess to indicate where to drill screw holes. Brackets should be

no more than 100mm either end, and spread intermediately across the width approx 900mm apart. Brackets will be supplied for either recess or face fix as specified when ordering. If face fit be sure to check length to locate brackets are set at the correct height.



Face Fit Bracket



Recess Fit Bracket

When you are happy that you have correct positions for the brackets pre drill the screw holes and fix brackets securely. To help distinguish which room the track is for and which way round the track is installed, you will find a sticker on the **front face** with the room name as per your order. Locate track up to lever brackets & close lever to secure track in desired position.

Spread the panel runners along the track to give easy access to attach the panels to the track.

Depending on how you have chosen your panel blind configuration, **ensure you position your lead panel and Fixed panel in the correct position this is extremely important as once the panels are clipped into place they lock in very securely.** Unpack your fabric panels and locate your fixed and lead panels these will have a small round label attached at the top L for lead and F for fixed. On centre opening blinds you will have two fixed and two leads and they will be labeled LL (lead panel left) and LR (lead panel right) FL (fixed panel left) and FR (fixed panel right) Please refer to back of this sheet for configurations & fixed & lead panel positions before fixing in place.



Wand attached to lead panel


You will also have a panel installation guide packed in with your panel fabric specific to the Configuration of your blind to help you position your panels correctly.

To operate your new blind use wand control to open & close using a steady tension and movement and avoid jerking or tugging of the wand.

Your blind is now installed and ready. We hope it brings you and your home many years of great functionality and beauty. We thank you for your purchase.


**Identify the blind configuration you selected when ordering**

1A

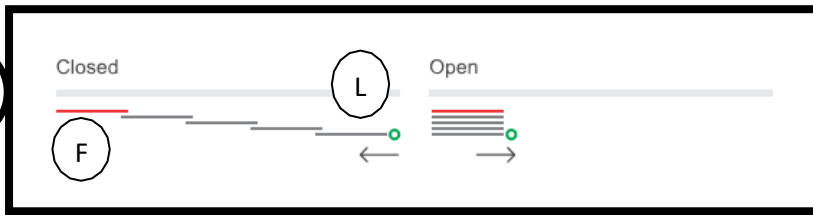


Left Bunch with:-  
Fixed Panel to rear & Lead Panel to the Front

1B

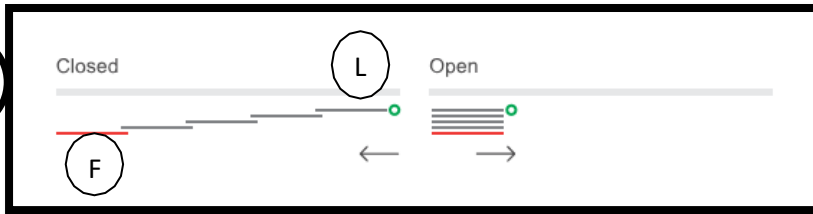


Left Bunch with:-  
Fixed Panel to front & Lead Panel to the rear

2A

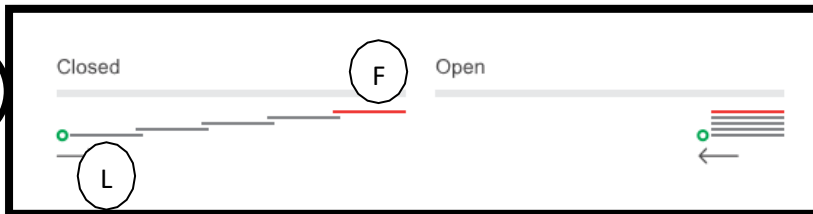


Right Bunch with:-  
Fixed Panel to rear & Lead panel to the front

2B

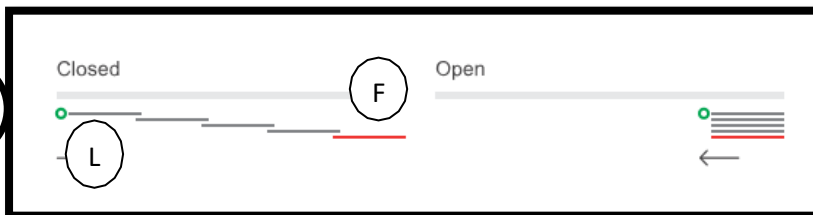


Right Bunch with:-  
Fixed Panel to front & Lead Panel to the rear

3A

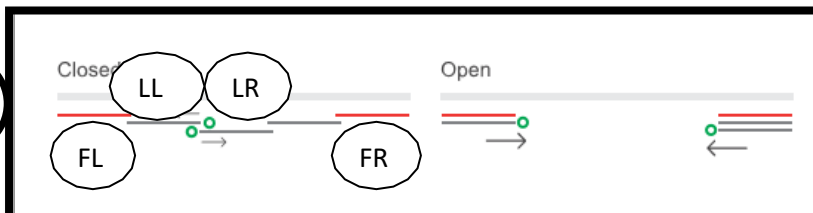



Centre Opening with:-  
Fixed Panels to rear & Lead Panels to the front

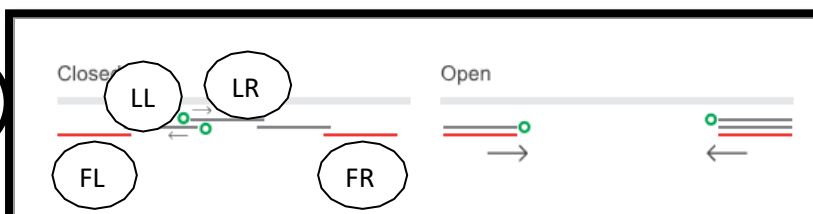3B



Centre Opening with :-  
Fixed Panels to the front & Lead Panels to the rear

**Fixed Panel:**  The fixed Panel will remain in position when blind is open or closed  
**Lead Panel:**  This is the Panel that has your wand control attached to open and close  
**Left or Right Bunch:** This shows the side your panels will stack to when your blind is fully open.  
**Centre Opening:** You will have two Fixed panels and two Lead panels and your panels will stack to the left and right, ensure that your two lead panels are in separate track chanel this allows them to overlap when the blind is closed.

# IMPORTANT INFORMATION

## WARNING

### ALL WINDOW COVERINGS WITH CORD OR CHAIN



## Installation instructions

To avoid strangulation hazard, all internal window coverings with cord/ chain controls must have a child safety device installed where the cord has the possibility of forming a loop of 220mm or longer and it is at a height of less than 1600mm above floor level

To avoid creating a possible strangulation hazard for children , the corded internal window covering must be installed in such a way that the loose cord cannot form a loop of 220mm or longer at a height of less than 1600mm from floor level.

When using a cleat (Style 1) to secure the cord it must be at least 1600mm from floor level because a child is capable of unwinding a cord from a cleat. Please wind cord in a figure 8 dimension as indicated on Style 1 diagram.

A cord guide (Style2) may be installed lower than 1600mm above floor level if the cord is sufficiently secured or tensioned to prevent a loop 220mm or longer from being formed. If the cord is installed lower than 1600mm from floor level it must be designed to prevent a child from being able to remove the cord.

## Making Blinds and Curtains Safer for Children

Blinds and curtain cords can be made safer in the following way:

Attach a Safety Device (enclosed)


**Attach a cleat (Style 1)** to the wall or window frame 1600mm or higher from the floor away from children or pets and wrap around the cleat.

- 1) Affix cleat with screws as shown
- 2) Wind loose cord around safety cleat


**Attach a cord guide (Style 2)**

- 1) Affix cord guide with screws as shown
- 2) Secure cord in cord guide at all times

Style 1 - Cleat

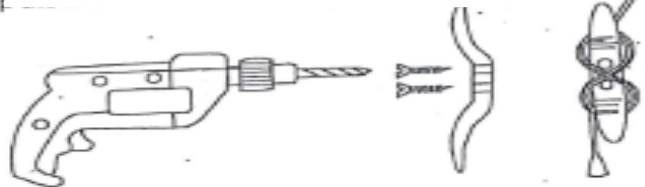

Style 2 - Cord guide

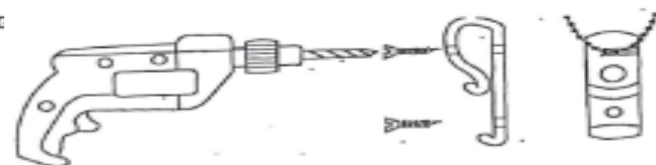

**'WARNING: CURTAIN AND BLIND CORDS HAVE CAUSED THE DEATH OF YOUNG CHILDREN AND MUST BE INSTALLED SO THAT THEY ARE NOT A STRANGULATION HAZARD. FOLLOW THE INSTALLATION INSTRUCTIONS'.**

