

# ALUMINIUM VENETIAN TTS CHAIN CONTROL BLIND FITTING INSTRUCTIONS

## ACCESSORIES ENCLOSED:


2-4 pieces of spider brackets

8-12 screws 6x 3/4" for brackets

Child safety tension devices

1. Position the end brackets for fixing either (face or top) ensuring that the brackets are fixed approximately 5cm from the end of the blind. The centre bracket (required for blinds exceeding 100cms width) may be positioned as required NB. Take care not to position the brackets where they would interfere with the working mechanisms of the blind

2. Now present the blind to the bracket ensuring that the lugs position snugly under the front rim of the headrail. Then push the locking arm until it is pressed against the headrail.

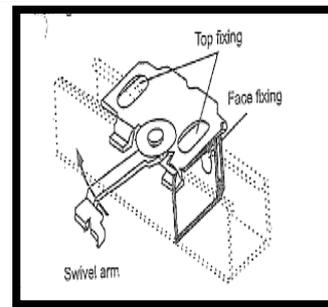

3. To adjust the drop of blind :- After mounting the blind, check the height of the blind to see if this should be adjusted. If this is the case then do as follows:-  
Carefully observe how the bottom rail is clasped into position by the plastic button. Remove the button from the frame and undo the knot in the lift cord.  
Remove the appropriate number of slats to create desired length., reassemble the bottom rail and insert the button into position again make sure any excess length is removed from lift cord but allowing for knot to be tied into button ( be careful not to trim too short or blinds will not lower properly)

4. Secure the safety tension device, firmly to the wall with chain secured and tensioned to prevent a loop 220mm or longer from being formed.  
It is important to keep chains and cords safely away from children. Your new blind will have a safety warning tag attached please read carefully and do not remove.



5. To operate the blinds:  
Keeping a steady tension use chain control to rotate lift and lower

6. Your blind is now installed and ready. We hope it brings you and your home many years of great functionality and beauty. We thank you for your purchase.

# IMPORTANT INFORMATION

## WARNING

### ALL WINDOW COVERINGS WITH CORD OR CHAIN



## Installation instructions

To avoid strangulation hazard, all internal window coverings with cord/ chain controls must have a child safety device installed where the cord has the possibility of forming a loop of 220mm or longer and it is at a height of less than 1600mm above floor level

To avoid creating a possible strangulation hazard for children , the corded internal window covering must be installed in such a way that the loose cord cannot form a loop of 220mm or longer at a height of less than 1600mm from floor level.

When using a cleat (Style 1) to secure the cord it must be at least 1600mm from floor level because a child is capable of unwinding a cord from a cleat. Please wind cord in a figure 8 dimension as indicated on Style 1 diagram.

A cord guide (Style2) may be installed lower than 1600mm above floor level if the cord is sufficiently secured or tensioned to prevent a loop 220mm or longer from being formed. If the cord is installed lower than 1600mm from floor level it must be designed to prevent a child from being able to remove the cord.

## Making Blinds and Curtains Safer for Children

Blinds and curtain cords can be made safer in the following way:

Attach a Safety Device (enclosed)

**Attach a cleat (Style 1)** to the wall or window frame 1600mm or higher from the floor away from children or pets and wrap around the cleat.

- 1) Affix cleat with screws as shown
- 2) Wind loose cord around safety cleat


**Attach a cord guide (Style 2)**

- 1) Affix cord guide with screws as shown
- 2) Secure cord in cord guide at all times

Style 1 - Cleat



Style 2 - Cord guide

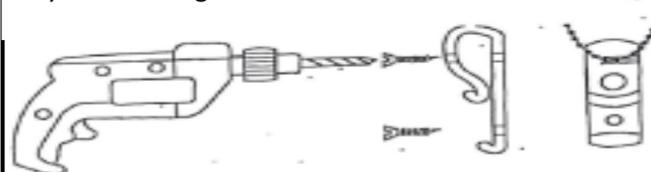

**'WARNING: CURTAIN AND BLIND CORDS HAVE CAUSED THE DEATH OF YOUNG CHILDREN AND MUST BE INSTALLED SO THAT THEY ARE NOT A STRANGULATION HAZARD. FOLLOW THE INSTALLATION INSTRUCTIONS'.**