

INTRODUCTION

▶ GUIDE TO PICTURES & TERMINOLOGY USED FOR INDOOR TUBULAR MOTORS - Roller blinds, Aero, Vision, Triple Shade & Trico shade

Control Buttons used for installation :



P1 Motor Program Button on 3N & 6N Tubular Motors (Green button)



P1 Motor program button on 1.1N Tubular motor (Small square hole) insert tip of pen or similar to activate motor

ALWAYS ENSURE THAT THE P1 MOTOR BUTTON IS ACCESSIBLE (FACING FORWARDS) WHEN INSTALLING BLINDS

P2 (Found on the back of remote control top left hand side of the battery area)

UP △ (Found on front of remote control)

STOP – (Found on front of remote control)

DOWN ▽ (Found on front of remote control)

CHANNEL SELECTION < > (Found on front of DD1802H Multi Channel Remote)

To ensure precise limit settings always rotate roller blinds up and down fully before entering limits to allow fabric to settle properly after transit.


SETTING UP MOTOR TO REMOTE CONTROL

- ▶ *IF YOU ARE USING MULTI CHANNEL REMOTE SELECT REQUIRED CHANNEL BEFORE PROGRAMMING*
- ▶ PAIRING MOTOR TO REMOTE
- ▶ Press and hold P1 on Motor - Blind will jog (release button) & beep
- ▶ Press and hold Stop on remote control - Blind will jog (release button)& beep - Blind & Remote are now paired
- ▶ CHECK DIRECTION
- ▶ If blind is moving in the wrong direction hold the UP and DOWN button simultaneously - blind will jog & beep
- ▶ SETTING TOP & BOTTOM LIMITS
- ▶ At this stage the blind will move in jog mode - to take out of jog mode hold the desired direction button until the blind moves at normal speed - when you press stop the blind will revert back to jog mode until the top and bottom limits are set, allowing you precision setting.
- ▶ TOP LIMIT
- ▶ Run blind up to desired top limit press the Stop & Up buttons simultaneously - Blind will jog and beep - Your top limit is now set.
- ▶ BOTTOM LIMIT
- ▶ Run blind down to desired bottom limit press the Stop & Down buttons simultaneously - Blind will jog and beep - Your bottom limit is now set.
- ▶ Now that your top and bottom limits are set the blind will now automatically be out of jog mode and moving at normal speed.

RESET TO FACTORY MODE

- ▶ To clear all settings and return to factory mode
- ▶ Hold the P1 motor button for approx. 14 seconds
- ▶ During this time the blind should have jogged 4 times with a lengthy pause between jogs after the fourth jog release the P1 button - the blind will respond with a series of jogs and beeps and will now be back to factory setting mode and will no longer respond to the remote control.

USING YOUR REMOTE CONTROL

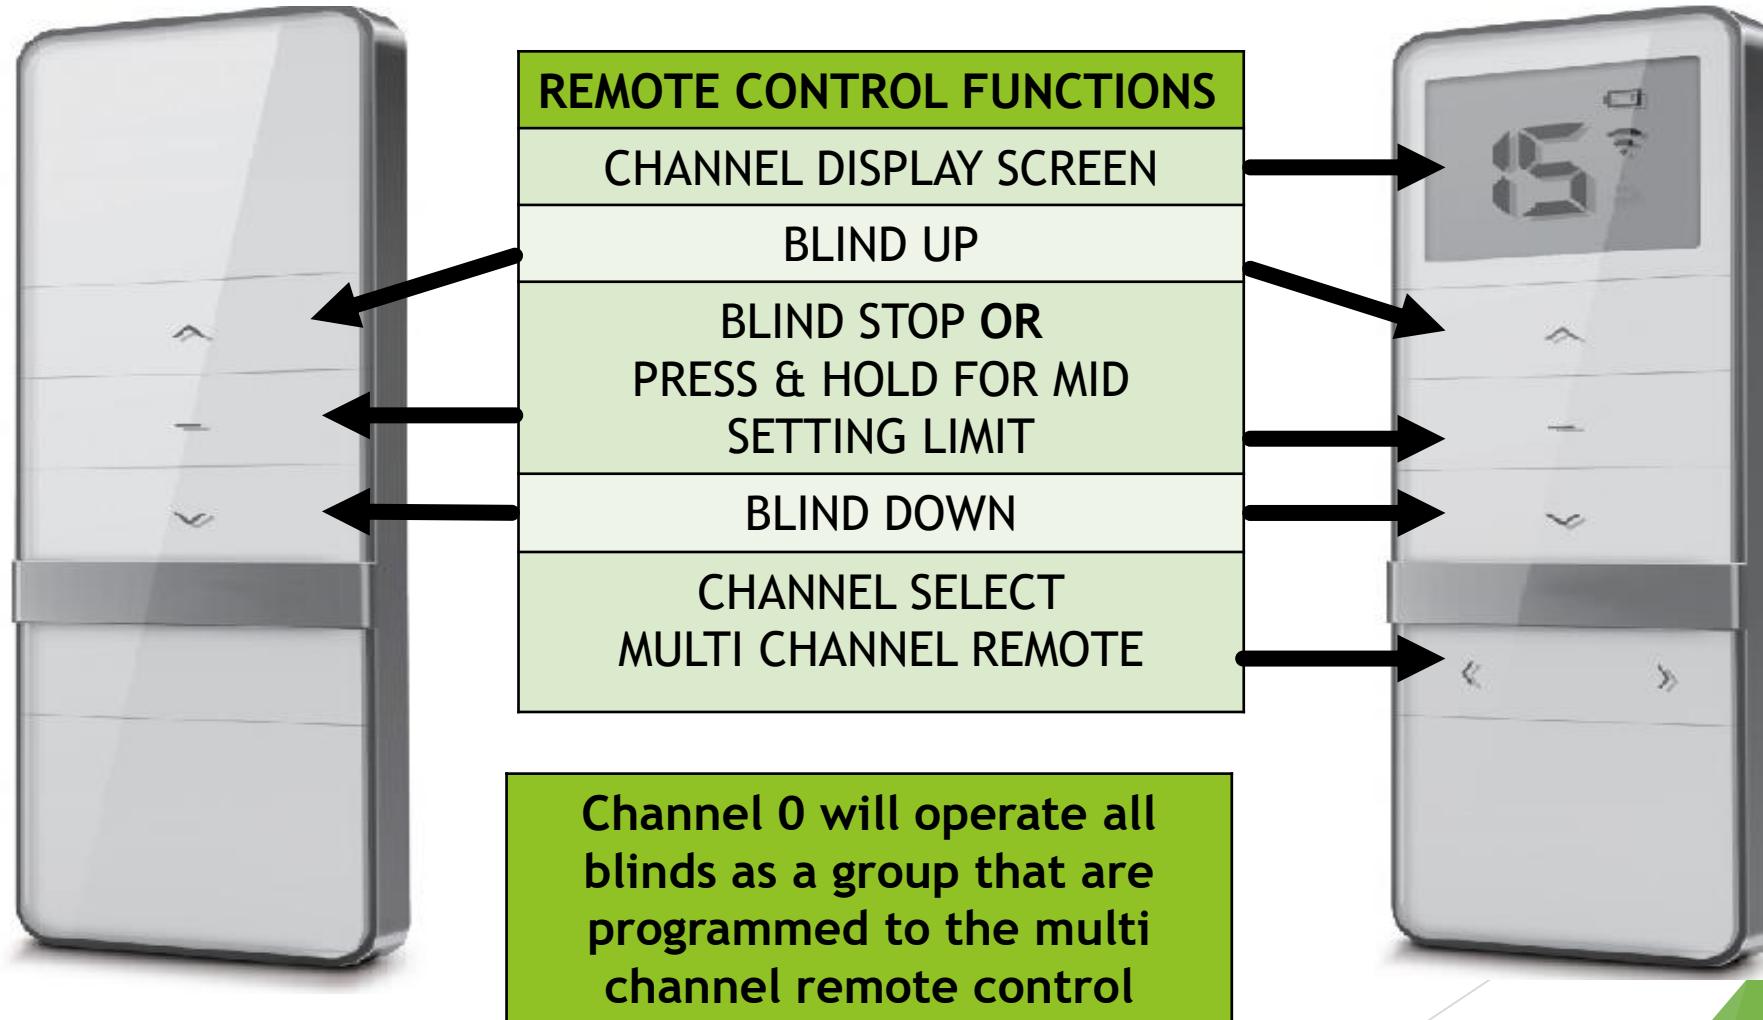

P2 BUTTON



0-5 Years

WARNING

Button cell lithium batteries are a danger if swallowed please keep the remote controls safely out of the reach of small children

CHARGING LITHIUM BATTERY MOTORS

- ▶ Lithium battery motors are supplied with a charger for each room/area it takes approx. 3-4 hours to fully charge each motor.
- ▶ Charger will show a red light indicator whilst charging ●
- ▶ This light will turn green when fully charged ●
- ▶ **DM25LE/S 1.1N LITHIUM BATTERY**



The circular charger port is located next to the square P1 hole on the motor

CHARGING LITHIUM BATTERY MOTORS

- ▶ DM35LE/S 3N LITHIUM BATTERY
- ▶ You will find two wires at the end of the motor the smaller is the signal wire the other is the power lead, connect the charger into power lead.



Please note: After charging the motor has been completed, wires can be tucked away out of site but please ensure they are clear of any moving parts.

